


User Manual

Commercial Vacuum Cleaner

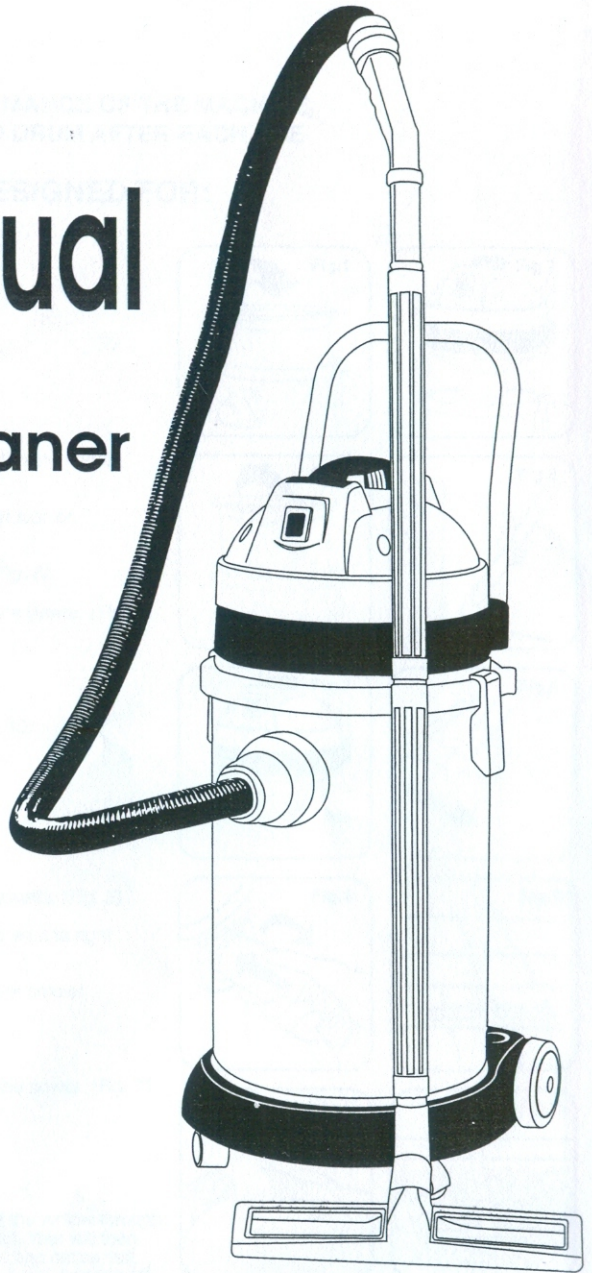

2 in 1 Vacuum Cleaner

WET & DRY

PLEASE READ INSTRUCTIONS CAREFULLY BEFORE USE & RETAIN FOR FUTURE REFERENCE

ATTENTION








**TO ENSURE THE EFFICIENT PERFORMANCE OF THE MACHINE,
CLEAN THE POLYESTER FILTER AND DRUM AFTER EACH USE**

THE VACUUM CLEANER IS DESIGNED FOR:

1. Dry vacuum suction of dust.
2. Wet vacuum suction of water based liquids.

DRY VACUUMING

- ◆ Insert the cloth filter bag in the tank. (Fig. 1)
- ◆ Assemble the motor head on tank and lock it manually. (Fig. 3)
- ◆ Connect the flexible hose to the suction inlet and twist to right to lock it. (Fig. 4)
- ◆ Connect the wand and the extensions to the other side of flexible hose. (Fig. 5)
- ◆ Select & connect the most suitable accessory. (Fig. 6).
- ◆ Connect the plug to power outlet and switch on the power. (Fig. 7)
- ◆ Uses of the crevice tool. (Fig. 8)
- ◆ Uses of the Ellipse Brush. (Fig. 9)
- ◆ Uses of the Water Nozzle for floor cleaning (Fig. 10)
- ◆ Uses of the Floor Nozzle for carpet tool. (Fig. 11)

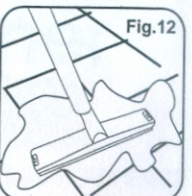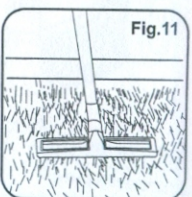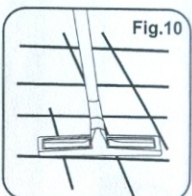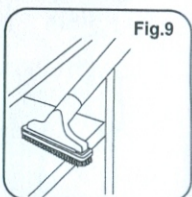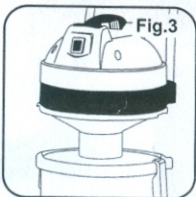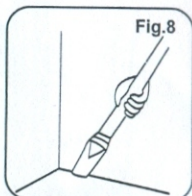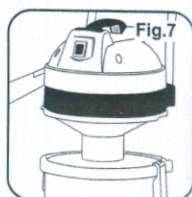

WET VACUUMING

- ◆ Remove the cloth filter bag. (Fig. 2)
- ◆ Assemble the motor head on tank and lock it manually. (Fig. 3)
- ◆ Connect the flexible hose to the suction inlet and twist to right to lock it. (Fig. 4)
- ◆ Connect the wand and the extensions to the other side of the flexible hose. (Fig. 5)
- ◆ Connect the water Nozzle. (Fig. 6)
- ◆ Connect the plug to power outlet and switch on the power. (Fig. 7)
- ◆ Uses of the water Nozzle. (Fig. 12)

WET PICK UP

The machine is equipped with float body that shuts off the airflow through the machine when the maximum liquid level is reached. You will then hear a noticeable change of the sound from the motor and notice that the suction power decreases. When this occurs, switch the machine off. Disconnect the machine from the sockets, and empty and clean the tank.

AFTER USE

Remove the plug from the socket when machine is not in use. Wind up the cord starting from the machine. The power cord can be wound up around the handle/hook located on the motor top. Some variants have special storage places for accessories.

TROUBLESHOOTING

If a problem occurs always switch off the unit immediately

1. Motor does not operate

- Ensure unit is plugged in correctly and switched on.

2. Suction power is reduced or motor operate but weak suction power

- The maximum level of dust or water collection has reached the limit. Press the ON/OFF button, disconnect the power cord from the power outlet and empty tank.
- Check and clear any blockages within the system or accessory.
- Ensure the filter is clean and not damaged in any way.

3. Heat from appliance

- Heat generated from appliance is normal.

IMPORTANT SAFEGUARDS

THIS VACUUM CLEANER IS TO BE USED FOR COMMERCIAL. ACCIDENTS DUE TO MISUSE CAN ONLY BE PREVENTED BY THOSE USING THE MACHINE. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

WARNING!

To reduce the risk of fire, electric shock, or injury, please read and follow all safety instructions and caution markings before use. This vacuum cleaner is designed to be safe when used for cleaning functions as specified. Should damage occur to electrical or mechanical parts, the cleaner and / or accessory should be repaired by a competent service station or the manufacturer before use in order to avoid further damage to the machine or physical injury to the user.

1. This appliance is strictly for indoor use only.
2. Ensure the voltage at the power outlet corresponds to the voltage indicated on the rating label.
3. If the power cord is damaged, switch off immediately and it must be replaced by the manufacturer or authorized service technician.
4. Never suck up asbestos or asbestos dust or anything that is burning or smouldering.
5. Never suck up flammable substances and do not suck up ashes unless they are cold. Do not use the appliance in rooms with explosive vapours (petrol, thinners, solvents).
6. Never suck up inflammable or corrosive liquids such as petrol or other volatile substances.
7. Use extra care when cleaning on stairs. Avoid sucking up sharp objects or objects that can obstruct the hose.
8. Always use the vacuum cleaner horizontally positioned. Never operate it on a slanted surface or hang it upside down. Otherwise the water may enter the motor to damage it.
9. Do not pull, lift or carry by the power cord. Do not use the cord as handle. Avoid closing the door on the cord or yank the cord around or against sharp edges or corners.
10. Do not use the appliance without the filter in place.
11. Never leave refuse in the dust box for long periods of time.
12. Do not handle the plug, switch or the appliance with wet hands.
13. Always remove the plug from the power socket in case of any malfunction, and after use and before cleaning.
14. Do not position the appliance or power cord on or near hot surfaces or near open flames.
15. Keep the appliance out of children's reach. This appliance should only be used by adults.